


SPILOT

Support & Maintenance

AMR (Autonomous Mobile Robot)

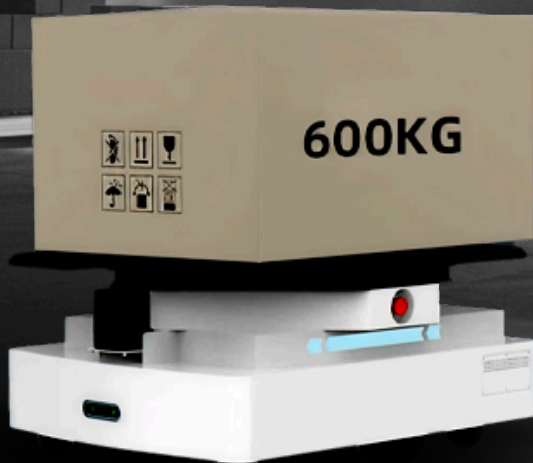

1. Robot positioning lost

Overview :

Location loss refers to the mismatch between the map location of the robot and the actual environmental location.

Cause :

- Positioning loss caused by manually pressing the emergency stop switch to move the machine
- During the robot's movement, it will match the current map based on actual laser data. If the current environment is too different from the map, it will cause the robot to fail to match the map, resulting in localization loss. Localization loss will cause the robot to lose its path planning ability and be unable to move
- Someone is surrounding the machine in front, causing a loss of positioning. If too many people surround the machine, it will block the laser, and the matching degree between the laser and the terrain will become very low, leading to a loss of positioning

Resolvent :

- Move the machine to the location of the charging station and restart the machine within 2m of the charging station (note: the target point of the charging station should be marked on the map)
-
- Enter the map interface and manually issue relocation instructions

2. Robot does not navigate

Overview :

Robot non navigation refers to allowing the robot to navigate to a certain point without moving

Cause :

- Check if the emergency stop switch of the machine is turned on. Only when the machine is turned on can it navigate autonomously (turning the emergency stop switch to the right indicates opening, pressing it indicates closing)
- Check if the machine has lost its positioning (if the orange laser and black obstacles on the map do not completely overlap, it indicates a loss of positioning)
- Check if the machine is close to obstacles or virtual walls (approaching obstacles or virtual walls can cause the machine to be unable to navigate)
- Check if the target point is close to obstacles or virtual walls

Resolvent :

- Move the machine to the location of the charging station and restart the machine within 2m of the charging station (note: the target point of the charging station should be marked on the map)
- Enter the map interface and manually issue relocation instructions

3. Robot navigation charging did not respond

Overview :

Sending navigation charging commands to the machine, the robot has not started navigation

Cause :

- Check if the calibration of the charging station point is done by using the charging station button after the machine is connected to the charging station
- Check if the charging station target is close to obstacles or virtual walls

Resolvent :

- Please refer to the calibration method for the charging station in the 'Calibration Location' section
- It is best not to have any obstacles within 1.5m on the left and right sides of the charging station

4. Repositioning

Overview :

Recalibrating the incorrect position of the machine

Cause :

- The on-site environment and map scanning have significant changes
- During machine operation, manually press the emergency stop switch to move the machine to an area that has not been scanned before moving it back
- Not turning on at the charging station position


Resolvent :


- Please refer to the calibration method for the charging station in the 'Calibration Location' section
- It is best not to have any obstacles within 1.5m on the left and right sides of the charging station


Be careful :

When the machine loses its positioning (i.e. the laser does not match the current terrain, as shown in Figure 1), it needs to be repositioned. The repositioning operation method is shown in Figure 1, and Figure 2 has successfully repositioned. If the repositioning is not successful, try again using this method.

line indicates the actual direction of the machine) to relocate it.

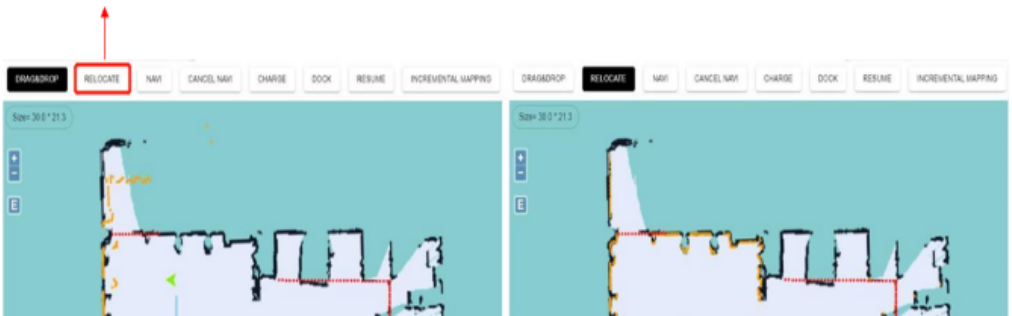

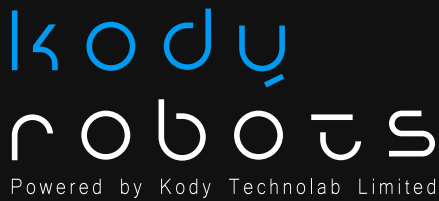

 +91 93167 56367

 sales@kodytechnolab.com

 www.kodyrobots.com

Disclaimer

We reserve the right to make technical changes to the products and changes to the contents of this document at any time without any prior notice. For orders, the respective agreed properties are decisive. Kody Robots assumes no responsibility for any errors or omissions in this document. We reserve all the rights to this document and the objects and illustrations contained herein. Reproduction, disclosure to third parties or exploitation of its contents even in part is prohibited without the prior written consent of Kody Robots.